


## EKC SPREAD ANCHOR

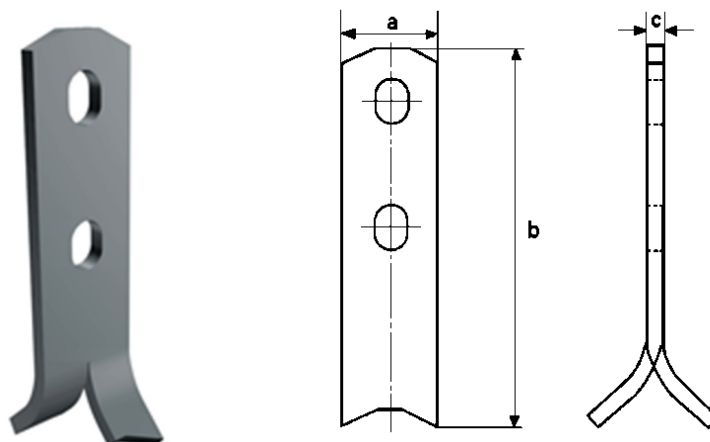

The stress transfer to the concrete occurs through the reinforcement bar and the lower spread of the anchor.

SWL TONNE	CODE	a (mm)	b (mm)	c (mm)
0.7	600070	30	110	5
1.4	600140	30	110	6
1.4	600141	30	160	6
2.0	600200	30	130	8
2.0	600201	30	160	8
2.0	600202	30	210	8
2.0	600203	30	250	8
2.5	600250	30	120	10
2.5	600251	30	150	10
2.5	600252	30	200	10
2.5	600253	30	250	10
5.0	600500	40	180	15
5.0	600501	40	240	15
5.0	600503	40	400	15
7.5	600750	60	260	16
7.5	600751	60	300	16
7.5	600752	60	420	16
10.0	601000	60	300	20
10.0	601001	60	370	20