


EKC ERECTION ANCHOR

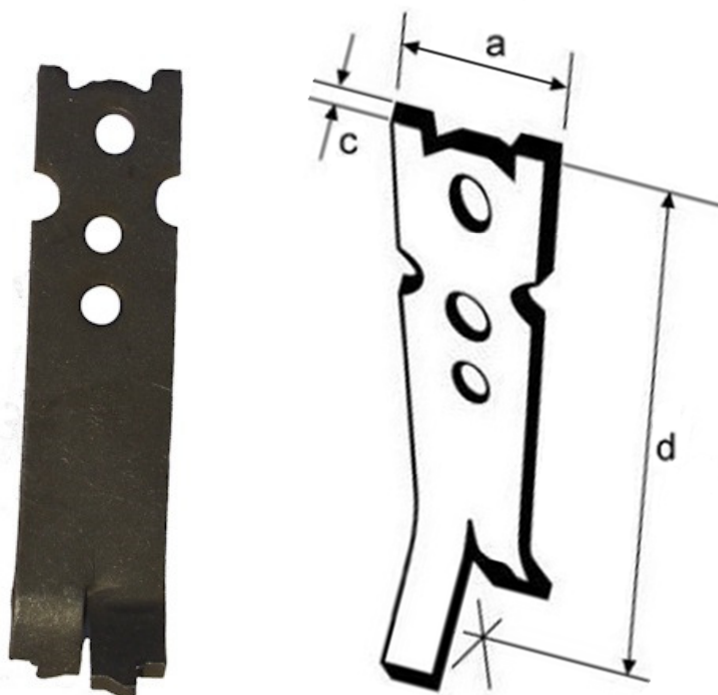

The stress transfer to the concrete occurs over the reinforcement bar in the lower hole. The shoulders of this anchor prevent spalling of concrete elements when lifting from a flat position.

SWL TONNE	CODE	WIDTH a (mm)	THICKNESS c (mm)	LENGTH d (mm)	WEIGHT PER 100 (kg)
2.5	580252	55	6	150	30
2.5	680253	55	6	200	37
2.5	680254	55	10	230	71
5.0	580500	70	12	270	130
5.0	580501	70	15	290	190
10.0	581000	95	15	320	345
10.0	581001	95	20	390	460
26.0	582600	148	20	500	TBA
26.0	582601	148	26	500	TBA
26.0	582602	148	30	500	TBA